

Compatibility Table

EO-ETTL II CANON ELECTRONIC FLASH EF-610 DG SUPER

Operation of TTL Auto system varies depending on the Camera Model (If E-TTL II, E-TTL and TTL Automatic Exposure can be used then A-TTL Automatic exposure is not possible). Manual Flash, Autozoom Head, AF Auxiliary Lamp, High-speed synchro (FP), Wireless Flash, Rear-curtain Synchro Flash, Exposure Compensation Function and Multi Flash functions can be used with all camera models. Manual switching of the amount of light is from 1/1 to 1/128. Auto Power-Off function shuts off 90 seconds after use.

	TTL Auto	Autozoom Head	Manual Flash	AF Auxiliary Lamp	Red-Eye Reduction Function	High-Speed Synchro	Wireless Flash	Designated Slave Flash *1	Normal Slave Flash	Rear Curtain Synchro	Exposure Compensation Function
EOS-1D	E-TTL	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS-1D Mark II	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS-1D Mark II N	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS-1D Mark III	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS-1D Mark IV	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS-1D X	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS-1Ds	E-TTL	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS-1Ds Mark II	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS-1Ds Mark III	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS 5D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS 5D Mark II	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS 5D Mark III	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS 5Ds	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS 5Ds R	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS 6D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *2	✓	✓
EOS 7D	E-TTL II	✓	✓	✓	✓	✓	✓	✓	✓ *3	✓	✓
EOS 7D Mark II	E-TTL II	✓	✓	✓	✓	✓	✓	✓	✓ *3	✓	✓
EOS 10D	E-TTL	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS 20D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS 30D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS 40D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS 50D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS 60D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS 70D	E-TTL II	✓	✓	✓	✓	✓	✓	✓	✓ *3	✓	✓
EOS D30	E-TTL	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS D60	E-TTL	✓	✓	✓	✓	✓	✓	✓	✓ *3	✓	✓
EOS 8000D, EOS REBEL T6s, EOS 760D	E-TTL II	✓	✓	✓	✓	✓	✓	✓	✓ *3	✓	✓
EOS Kiss Digital, EOS Digital REBEL, EOS 300D Digital	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS Kiss Digital N, EOS Digital REBEL XT, EOS 350D Digital	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS Kiss Digital X, EOS Digital REBEL Xti, EOS 400D Digital	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS Kiss X2, EOS REBEL Xsi, EOS 450D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS Kiss X3, EOS REBEL T1i, EOS 500D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS Kiss F, EOS REBEL XS, EOS 1000D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS Kiss X4, EOS REBEL T2i, EOS 550D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS Kiss X5, EOS REBEL T3i, EOS 600D	E-TTL II	✓	✓	✓	✓	✓	✓	✓	✓ *3	✓	✓
EOS Kiss X6i, EOS REBEL T4i, EOS 650D	E-TTL II	✓	✓	✓	✓	✓	✓	✓	✓ *3	✓	✓
EOS Kiss X7i, EOS REBEL T5i, EOS 700D	E-TTL II	✓	✓	✓	✓	✓	✓	✓	✓ *3	✓	✓
EOS Kiss X7, EOS REBEL SL1, EOS 100D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓

SIGMA

Compatibility Table

EO-TTL II CANON ELECTRONIC FLASH EF-610 DG SUPER

Operation of TTL Auto system varies depending on the Camera Model (If E-TTL II, E-TTL and TTL Automatic Exposure can be used then A-TTL Automatic exposure is not possible). Manual Flash, Autozoom Head, AF Auxiliary Lamp, High-speed synchro (FP), Wireless Flash, Rear-curtain Synchro Flash, Exposure Compensation Function and Multi Flash functions can be used with all camera models. Manual switching of the amount of light is from 1/1 to 1/128. Auto Power-Off function shuts off 90 seconds after use.

	TTL Auto	Autozoom Head	Manual Flash	AF Auxiliary Lamp	Red-Eye Reduction Function	High-Speed Synchro	Wireless Flash	Designated Slave Flash *1	Normal Slave Flash	Rear Curtain Synchro	Exposure Compensation Function
EOS Kiss X8i, EOS REBEL T6i, EOS 750D	E-TTL II	✓	✓	✓	✓	✓	✓	✓	✓ *3	✓	✓
EOS Kiss X50, EOS REBEL T3, EOS 1100D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓
EOS Kiss X70, EOS REBEL T5, EOS 1200D	E-TTL II	✓	✓	✓	✓	✓	✓ *1	✓	✓ *3	✓	✓

*1 It can be used as a Master unit only by using two DG SUPER units.

*2 Please set your Master unit to TTL auto flash (E-TTL, E-TTL II auto flash cannot be used) or Manual Flash mode.

*3 The built-in flash cannot be used. Please use the TTL flash function (Cannot be used on E-TTL, E-TTL II auto exposure adjustment) manual flash mode to use the external flash attached on the camera hotshoe.